


Heated windscreen , (4GX)

From November 2016

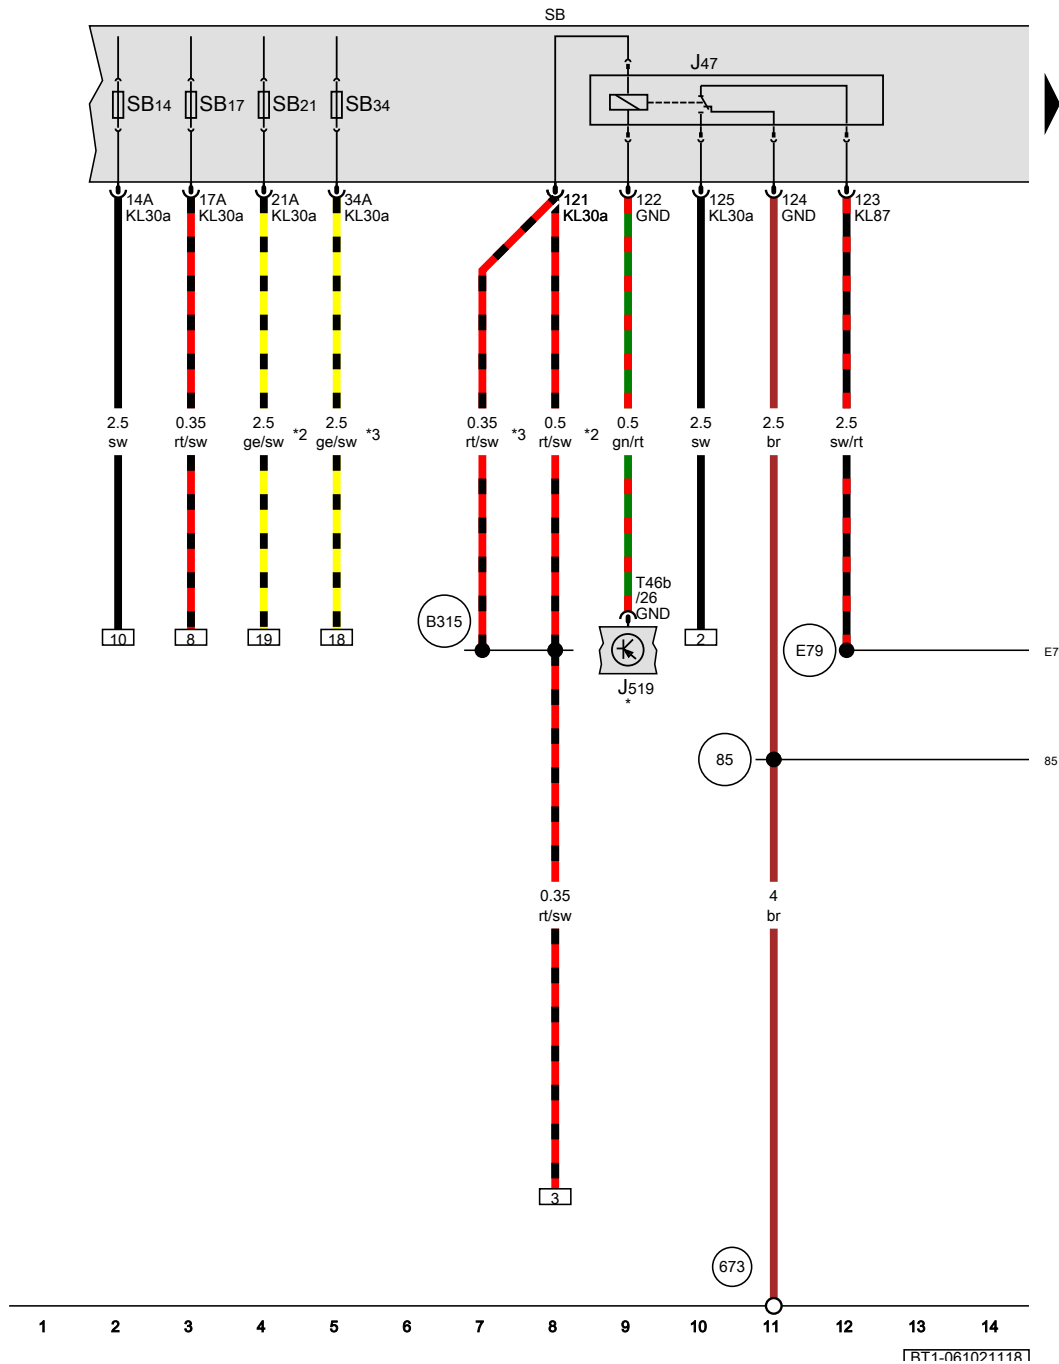


Onboard supply control unit, Fuse holder B

- J47 Heated windscreen relay
- J519 Onboard supply control unit
- SB Fuse holder B
- SB14 Fuse 14 on fuse holder B
- SB17 Fuse 17 on fuse holder B
- SB21 Fuse 21 on fuse holder B
- SB34 Fuse 34 on fuse holder B
- T46b 46-pin connector, black

- (85) Earth connection 1, in engine compartment wiring harness
- (673) Earth point 3, on front of left longitudinal member
- (B315) Positive connection 1 (30a) in main wiring harness
- (E79) Connection 3 (87a) in engine wiring harness
- * Activation via menu in infotainment system
- *2 Up to November 2018
- *3 From November 2018

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

[RT1-061021118]

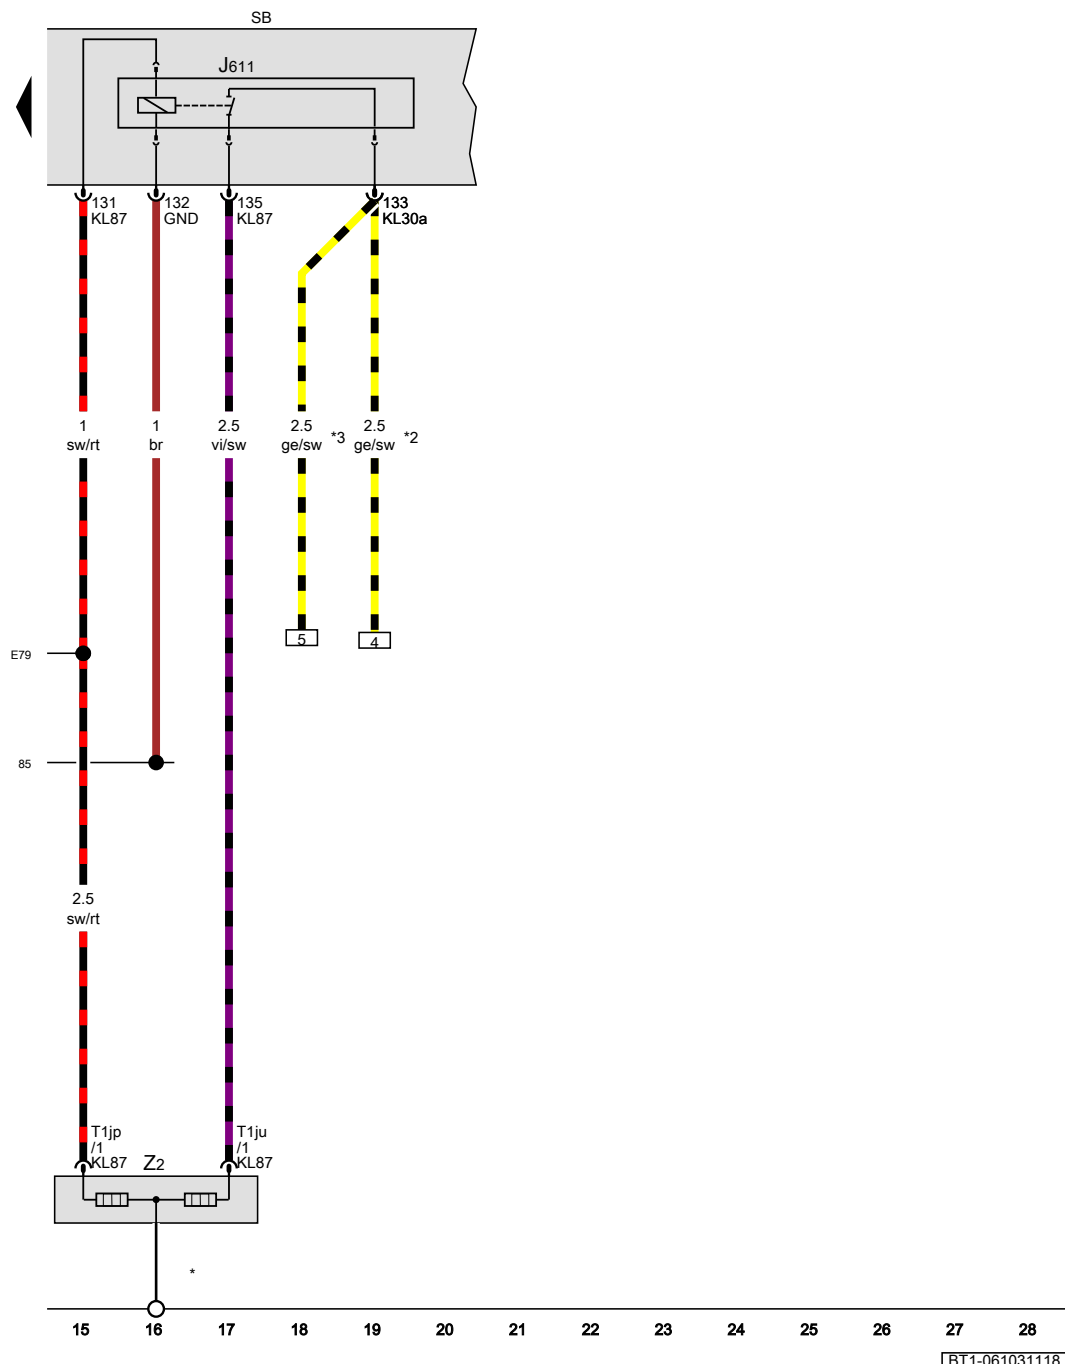

Fuse holder B, Heated windscreen

- J611 Heated windscreen relay 2
- SB Fuse holder B
- T1jp 1-pin connector, black
- T1ju 1-pin connector, black
- Z2 Heated windscreen

85 Earth connection 1, in engine compartment wiring harness

E79 Connection 3 (87a) in engine wiring harness

- * Earth supply via housing
- *2 Up to November 2018
- *3 From November 2018

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

[RT1-061031118]