


**Reversing camera (Rear Assist) , (KA1)**

From July 2017

Control unit 1 for information electronics, Reversing camera, Fuse holder A, Fuse holder C

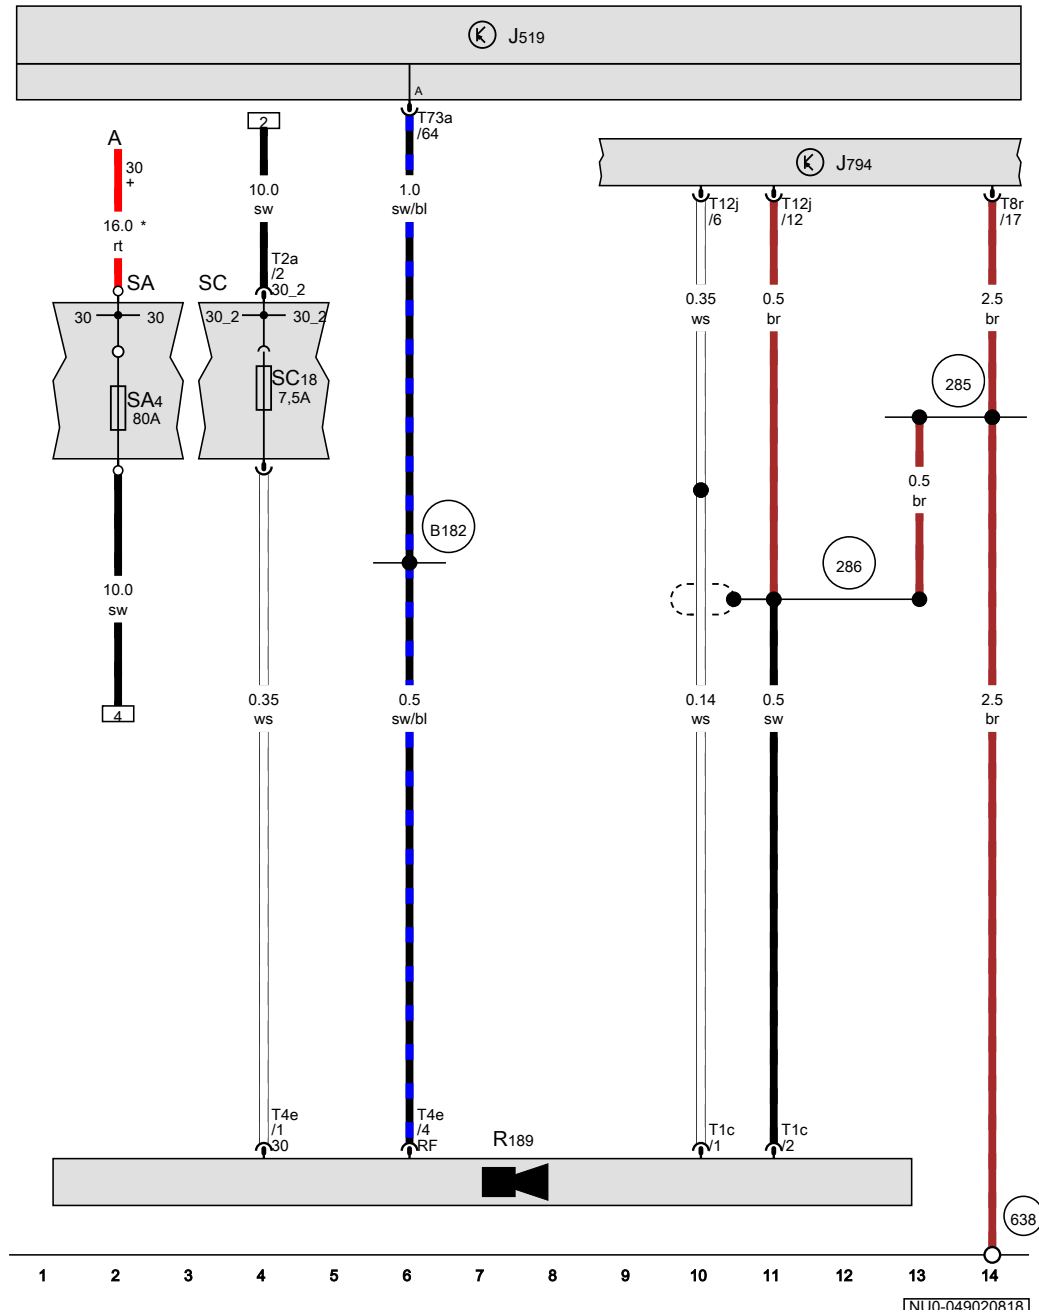

- A Battery
- J519 Onboard supply control unit
- J794 Control unit 1 for information electronics
- R189 Reversing camera
- SA Fuse holder A
- SA4 Fuse 4 on fuse holder A
- SC Fuse holder C
- SC18 Fuse 18 on fuse holder C
- T1c 1-pin connector
- T2a 2-pin connector
- T4e 4-pin connector
- T8r 8-pin connector, black
- T12j 12-pin connector, blue
- T73a 73-pin connector

- 285 Earth connection 7, in interior wiring harness
- 286 Earth connection 8, in interior wiring harness
- 638 Earth point, on right A-pillar
- B182 Connection (RL), in interior wiring harness
- \* see applicable current flow diagram for engine

1N110-0490208181